


Instructions for converting crib to youth bed

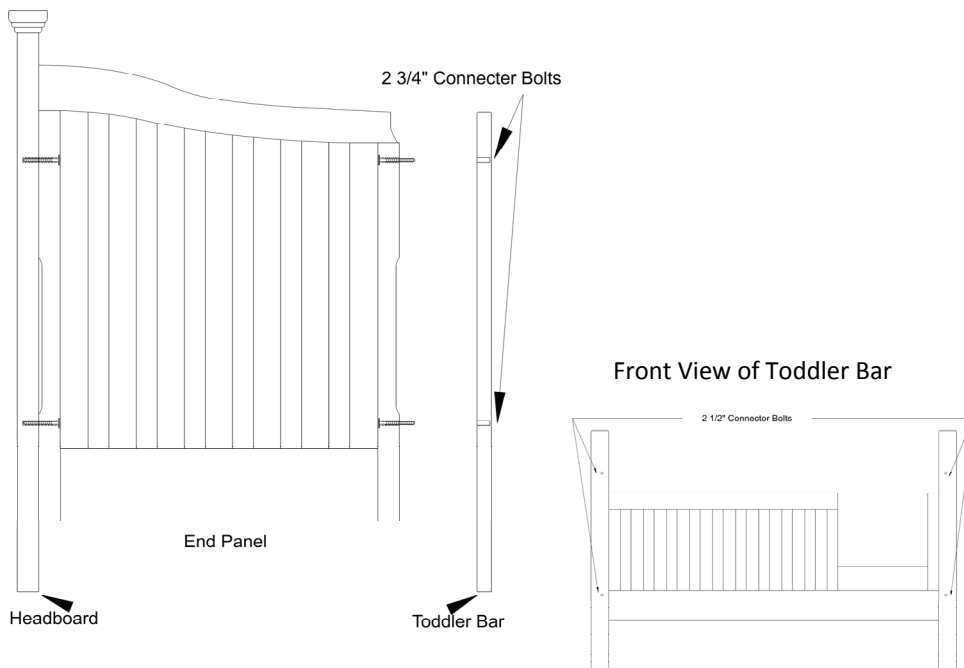


TOOLS AND PARTS NEEDED TO CONVERT CRIB TO DAY BED



8—INTERNAL TOOTH LOCK WASHERS




1—4 mm ALLEN WRENCH

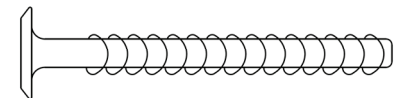

4—2 3/4" CONNECTER BOLTS

- Remove Footboard by unscrewing the four front 2 3/4" connector bolts from ends of footboard posts.
- Move crib mattress support to its lowest position.
- Attach conversion board with four 2 3/4" bolts provided by inserting bolts through posts and turning bolts into inserts in conversion boards ends.


Instructions for converting youth bed to full size bed

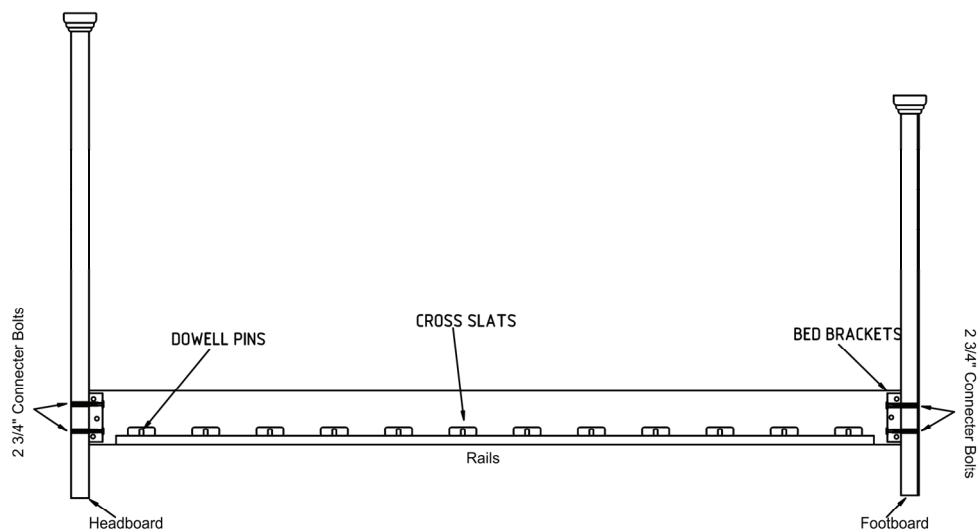

TOOLS AND PARTS NEEDED TO CONVERT CRIB TO FULL BED



8—INTERNAL TOOTH LOCK WASHERS

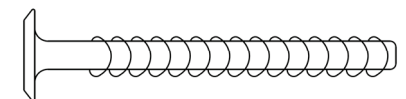

8—2 3/4" CONNECTER BOLTS



1—4 mm ALLEN WRENCH

- Remove crib mattress support, conversion board, and two end panels.
- Attach bed rails to footboard by inserting 2 3/4" connector bolts through posts and into steel inserts in bed brackets.
- Repeat same steps to attach headboard as footboard.
- Attach four cross slats by inserting cross slats (provided with your rails) over dowels that are on rails