



**WARNING:** Failure to follow these warnings and the assembly instructions could result in serious injury or death.



**WARNING:** Read all instructions before assembling crib. Keep instructions for future use.



**WARNING:** Infants can suffocate on soft bedding. Never add a pillow or comforter. Never place additional padding under an infant.

- To reduce the risk of SIDS, pediatricians recommend healthy infants be placed on their backs to sleep, unless otherwise advised by your physician.
  - Strings can cause strangulation ! DO NOT place items with a string around a child's neck, such as hood strings or pacifier cords. DO NOT suspend strings over a crib or attach strings to toys.
  - To help prevent strangulation tighten all fasteners. A child can trap parts of the body or clothing on loose fasteners.
  - DO NOT place crib near window where cords from blinds or drapes may strangle a child.
  - When child is able to pull to a standing position, set mattress to lowest position and remove bumper pads, large toys, and other objects that could serve as steps for climbing out.
  - When child is able to climb out or reaches the height of 35 in.(90 cm), the crib shall no longer be used.
  - Check this product for damaged hardware, loose joints, missing parts or sharp edges before and after assembly and frequently during use. DO NOT use crib if any parts are missing, damaged or broken. Contact Capretti Design for replacement parts and instructional literature if needed. DO NOT substitute parts.
  - Never use plastic shipping bags or other plastic film as mattress covers because they can cause suffocation.
  - Infants can suffocate in gaps between crib sides and a mattress that is too small. Use a mattress that is at least 27 1/4 x 51 5/8 with a thickness not exceeding six inches.
- Follow warnings on all products in a crib.

### MAINTENANCE AND CLEANING

- Caution: Periodically check the safety of your crib by making certain all screws, nuts and bolts are tightened securely. Call Capretti Design to replace any broken or missing parts. Do not substitute parts.
  - If refinishing, use a non toxic finish specified for children's products.
  - Your crib may be cleaned using a damp cloth with mild soap or a soft dry cloth.
- Avoid using furniture polish or cleaning agents that may be hazardous to children.

### OPERATION AND STORAGE

- This crib is guaranteed to meet all federal and state standards and will provide you with many years of service provided you adhere to the guidelines for assembly, maintenance and operation.
  - Never aim a vaporizer or heating vent directly at the crib as this will damage the crib.
- Put these instructions in your hardware bag when done assembling the crib. Insert hardware bag into pouch on crib spring for further use.

#### *Capretti Design*

304 Indian Trace #703

Weston FL 33326

Phone: 1-800-536-4611

Fax: 877-548-5344

www.caprettidesign.com

#### **Capretti**


#### **Milano Crib to Twin**

#### **Model # 5501**


- 16—2 1/2" Connector Bolts
- 8—1 1/4" Connector Bolts (to fasten mattress support)
- 24- Internal tooth lock washers (for all connector bolts used on assembly of crib.)
- 1 - 4 mm Allen Wrench
- 1—Assembly Instruction

**Note : Parts diagram on next page.**


# PARTS DIAGRAM PAGE

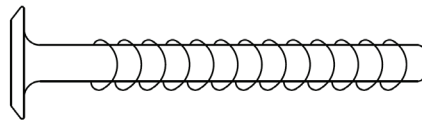

16 - 2 1/2" CONNECTER BOLT

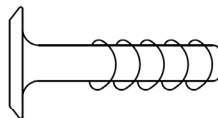

8 - 1 1/4" CONNECTER BOLT

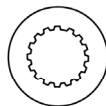



28 - INTERNAL TOOTH LOCK WASHERS



1 - 4 mm ALLEN WRENCH


# Instructions for assembling Capretti Milano Crib

## Step 1 = Attaching End Panels to base

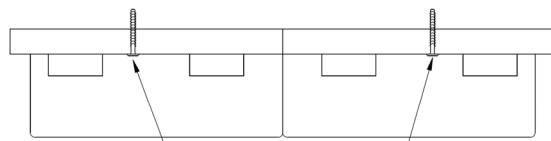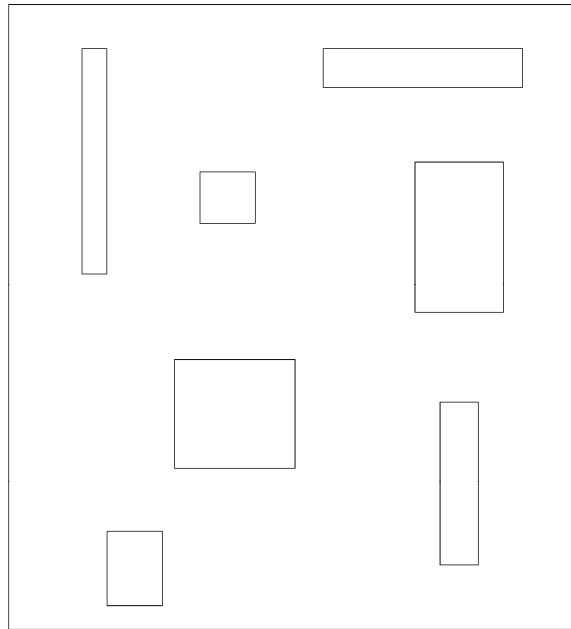

2 1/2" Connector Bolts


### TOOLS & PARTS NEEDED FOR STEP 1

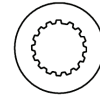

4—INTERNAL TOOTH LOCK  
WASHERS



1—4 mm ALLEN WRENCH

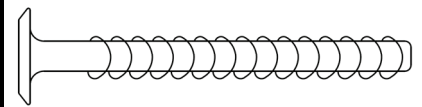

4—2 1/2" CONNECTER BOLTS

- Attach end panel to base by using 2 - 2 1/2" connector bolts
  - with lock washers attached .**IMPORTANT !!! USE LOCK WASHERS PROVIDE**
  - Repeat same step for other end panel.
- Tighten connector bolts with allen wrench provided. Make sure all connector bolts are tightened snugly .(**IMPORTANT!!! DO NOT OVERTIGHTEN**)

### Maintenance and Cleaning

- Caution: Periodically Check the safety of your crib by making certain all screws and nuts are tightened securely. Call Capretti Design to replace any broken or missing parts. Do not substitute parts.
- Your crib may be cleaned using a damp cloth with mild soap or a soft dry cloth.
- Avoid using furniture polish or cleaning agents that may be hazardous to children.
- If refinishing, use only non-toxic finish specified for children's products.

### Operation and Storage

This crib is guaranteed to meet all federal and state standards and will provide many years of service provided you adhere to the following guidelines for assembly, maintenance and operation. Never aim or point a vaporizer or humidifier directly at the crib. The water vapor will ruin the finish of the crib, as it would any other fine piece of furniture.


For parts or assistance call Capretti Design.

Disassemble and Storage:


1. Remove the crib mattress.
2. Follow the assembly instructions in reverse order starting with step 5.
3. Store your crib in a cool, dry place.

# Instructions for assembling Capretti Milano Crib

## Step 2 = Attaching Crib Mattress Support to Crib

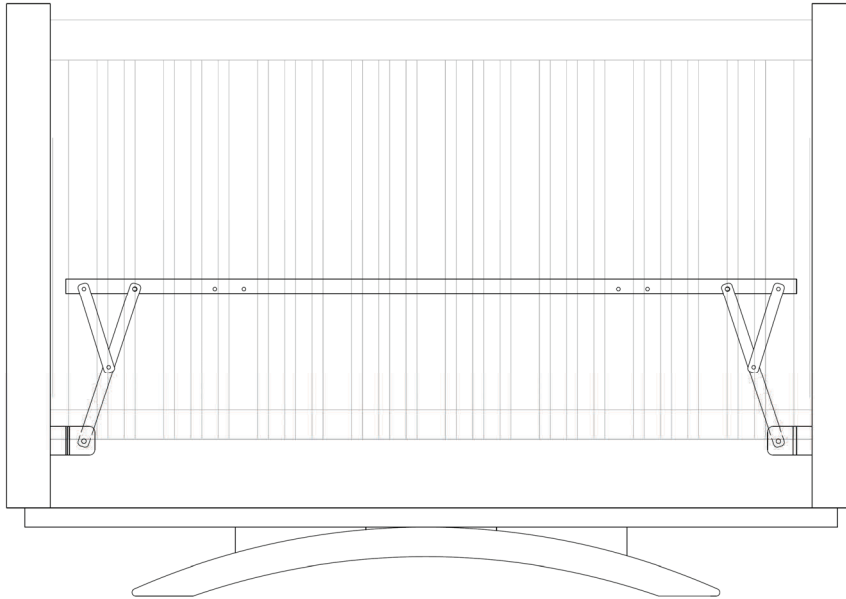


### TOOLS & PARTS NEEDED FOR STEP 2

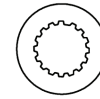


8— INTERNAL TOOTH LOCK  
WASHERS



1—4 mm ALLEN WRENCH

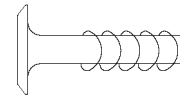

8—1 1/4" CONNECTER BOLTS

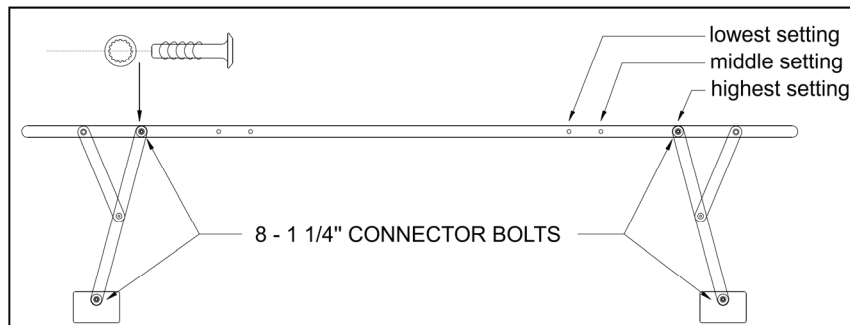

- Attach crib springs to metal inserts on wood block mounted on crib end.
- Use 4— 1 1/4" connector bolts with lock washers to attach each corner of crib mattress support .**IMPORTANT !!! USE LOCK WASHERS PROVIDED**
- Make sure all connector bolts are tightened snugly .(**IMPORTANT!!! DO NOT OVERTIGHTEN**)

**( CAUTION !!! ANY MATTRESS USED IN THIS CRIB  
MUST BE AT LEAST 27 1/4 INCHES BY 51 5/8 INCHES  
WITH A THICKNESS NOT EXCEEDING 6 INCHES.**

# Instructions for assembling Capretti Milano Crib

Step 3 = Attaching Headboard and Footboard to Base


## TOOLS & PARTS NEEDED FOR STEP 3




12—INTERNAL TOOTH LOCK  
WASHERS



1—4 mm ALLEN WRENCH

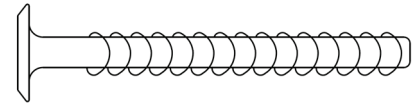


12—2 1/2 " CONNECTER BOLTS

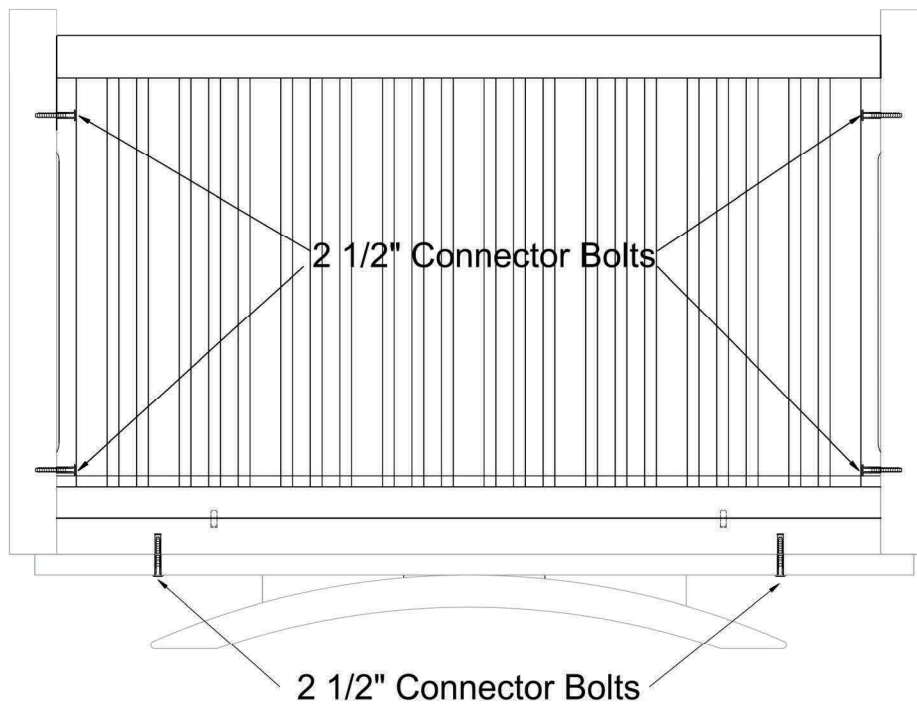


- Attach footboard to end panels and base by using 6 - 2 1/2" connector bolts with lock washers attached. **IMPORTANT !!! USE LOCK WASHERS PROVIDED**
- Repeat same steps for headboard
- Make sure all connector bolts are tightened snugly. **(IMPORTANT!!! DO NOT OVERTIGHTEN)**


# Instructions for converting crib to twin size bed

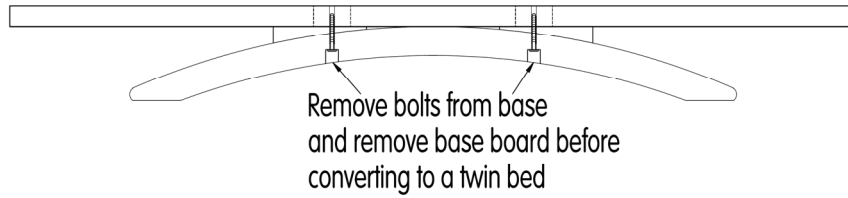

Back View of headboard

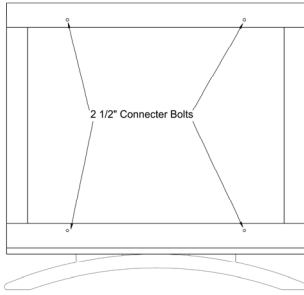


Headboard

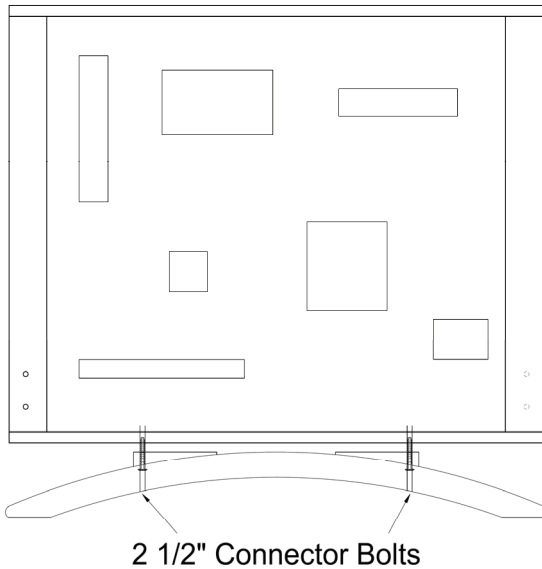


2 1/2" Connector Bolts

## TOOLS & PARTS TO CONVERT YOUR CRIB INTO A

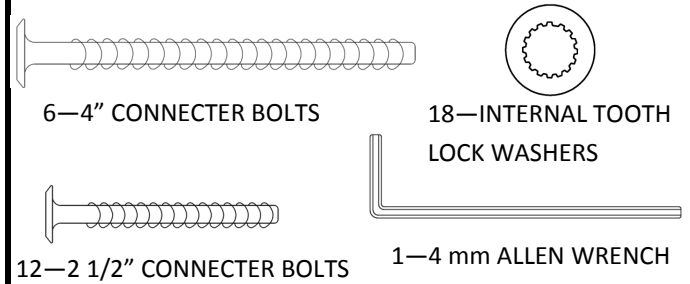

Footboard

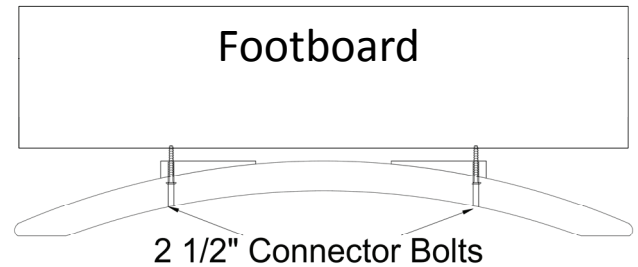

2 1/2" Connector Bolts

- Remove crib mattress support, footboard, headboard, two end panels and base boards
- Remove base boards by removing 4 connector bolts. (see illustration above)
- Attach end panel to base by laying it on the side in inserting it in the wood frame use 4 - 2 1/2" connector to attach it frame to panel
- The frame/end panel is now ready to attach to the base by inserting 4 2 1/2" connector bolts through footboard panel into base.
- Attach bed rails to footboard by inserting 2 1/2" connector bolts through bed brackets and into steel inserts in bed posts.
- Attach bed rails to headboard by inserting 2 1/2" connector bolts through headboard into rail attachments.
- Attach 12 cross slats by inserting cross slats (provided with your rails) over dowels that are on rails